Portable Fan User Manual



1. Package list



1. Portable Fan



2. Tote bag



3. User manual



4. Power 5V 2.1A



5. USB Cable



6. Water bottle



7. Dishcloth

2. Place the batteries


Fan included 6 pcs 18650 batteries, Cell capacity is 15600mAh. Users can change batteries by themselves, battery capacity up to 21600mAh.

HXS 18650 2600mAh 3.70




This relates to the contacts, specifically the positive contact. Button top batteries will protrude slightly, whereas flat top batteries sit perfectly flush.

- 1. Push with both hands clockwise.
- 3 Choose the Button Top battery
- 2. Remove the battery cover from the finger buckle.

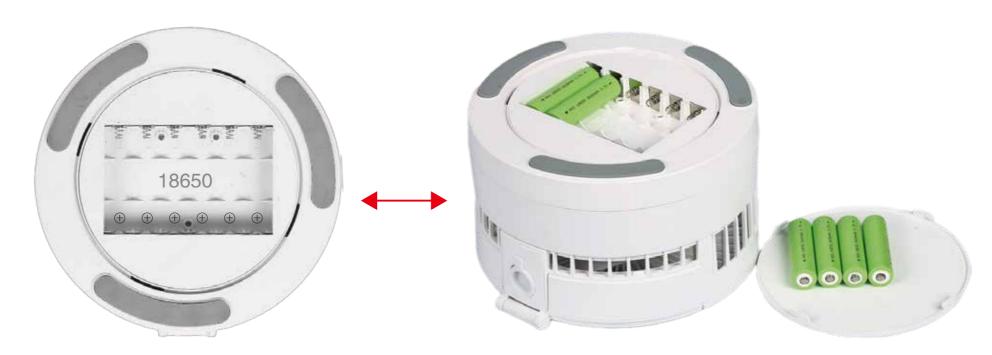


4 The positive and negative poles of the battery correspond to the mark, Insert the batteries and install the battery cover.


3. Open the fan

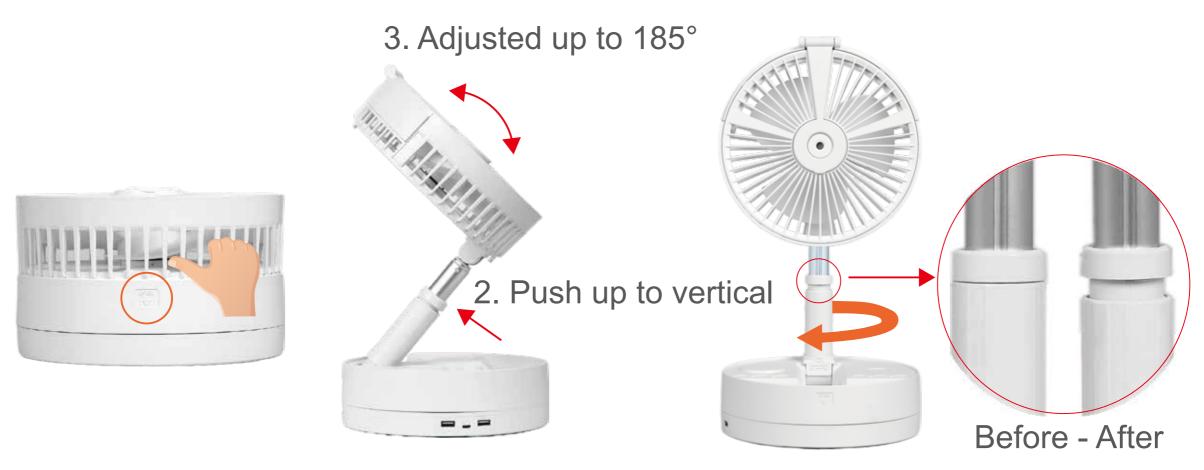

- 1. Put your fingers on the upper of "Open" then push up.
- 4. Rotate down until the compact state

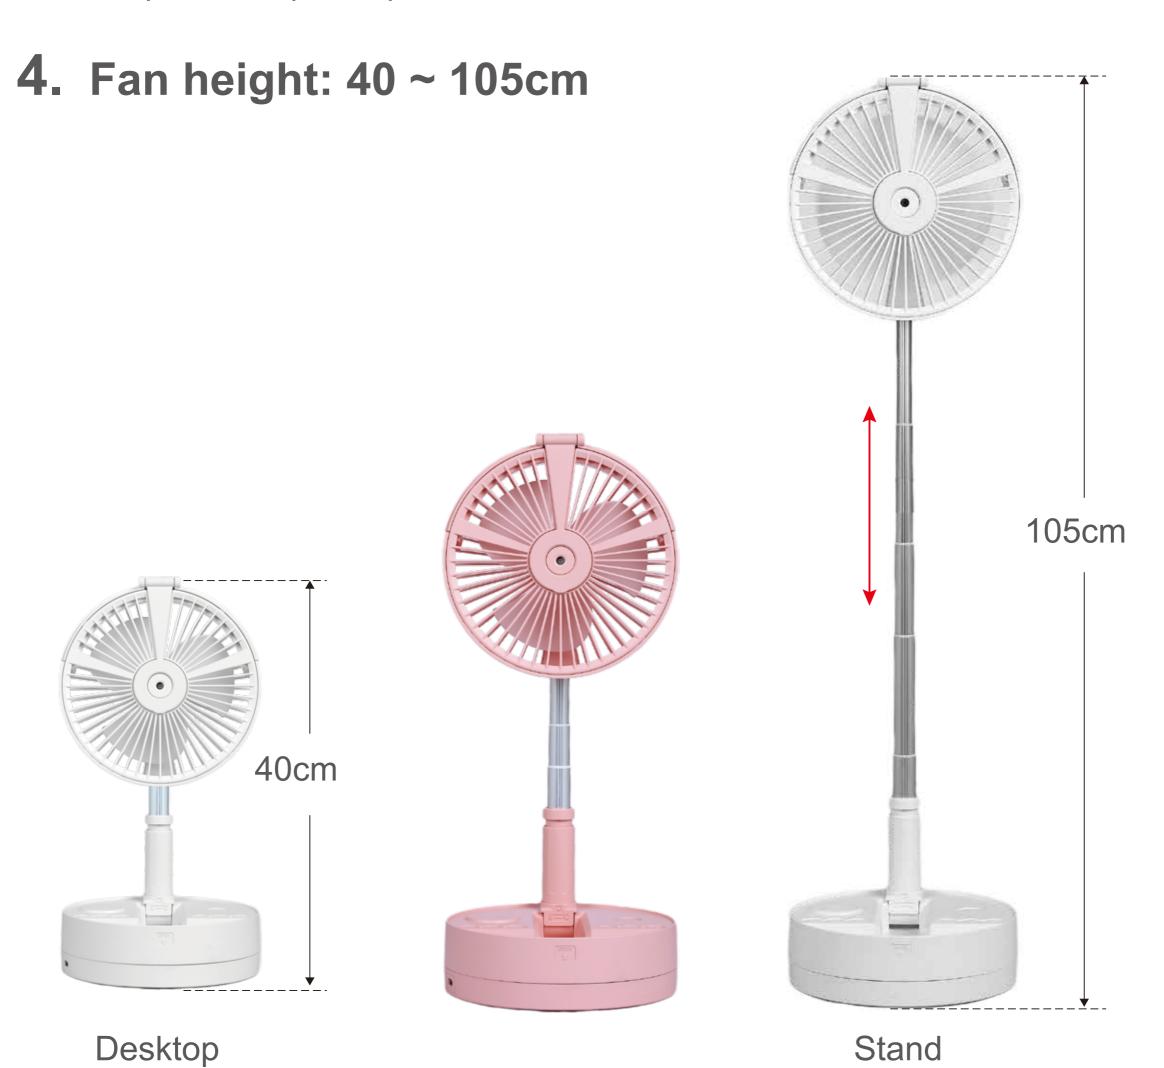

5. Parts introduction

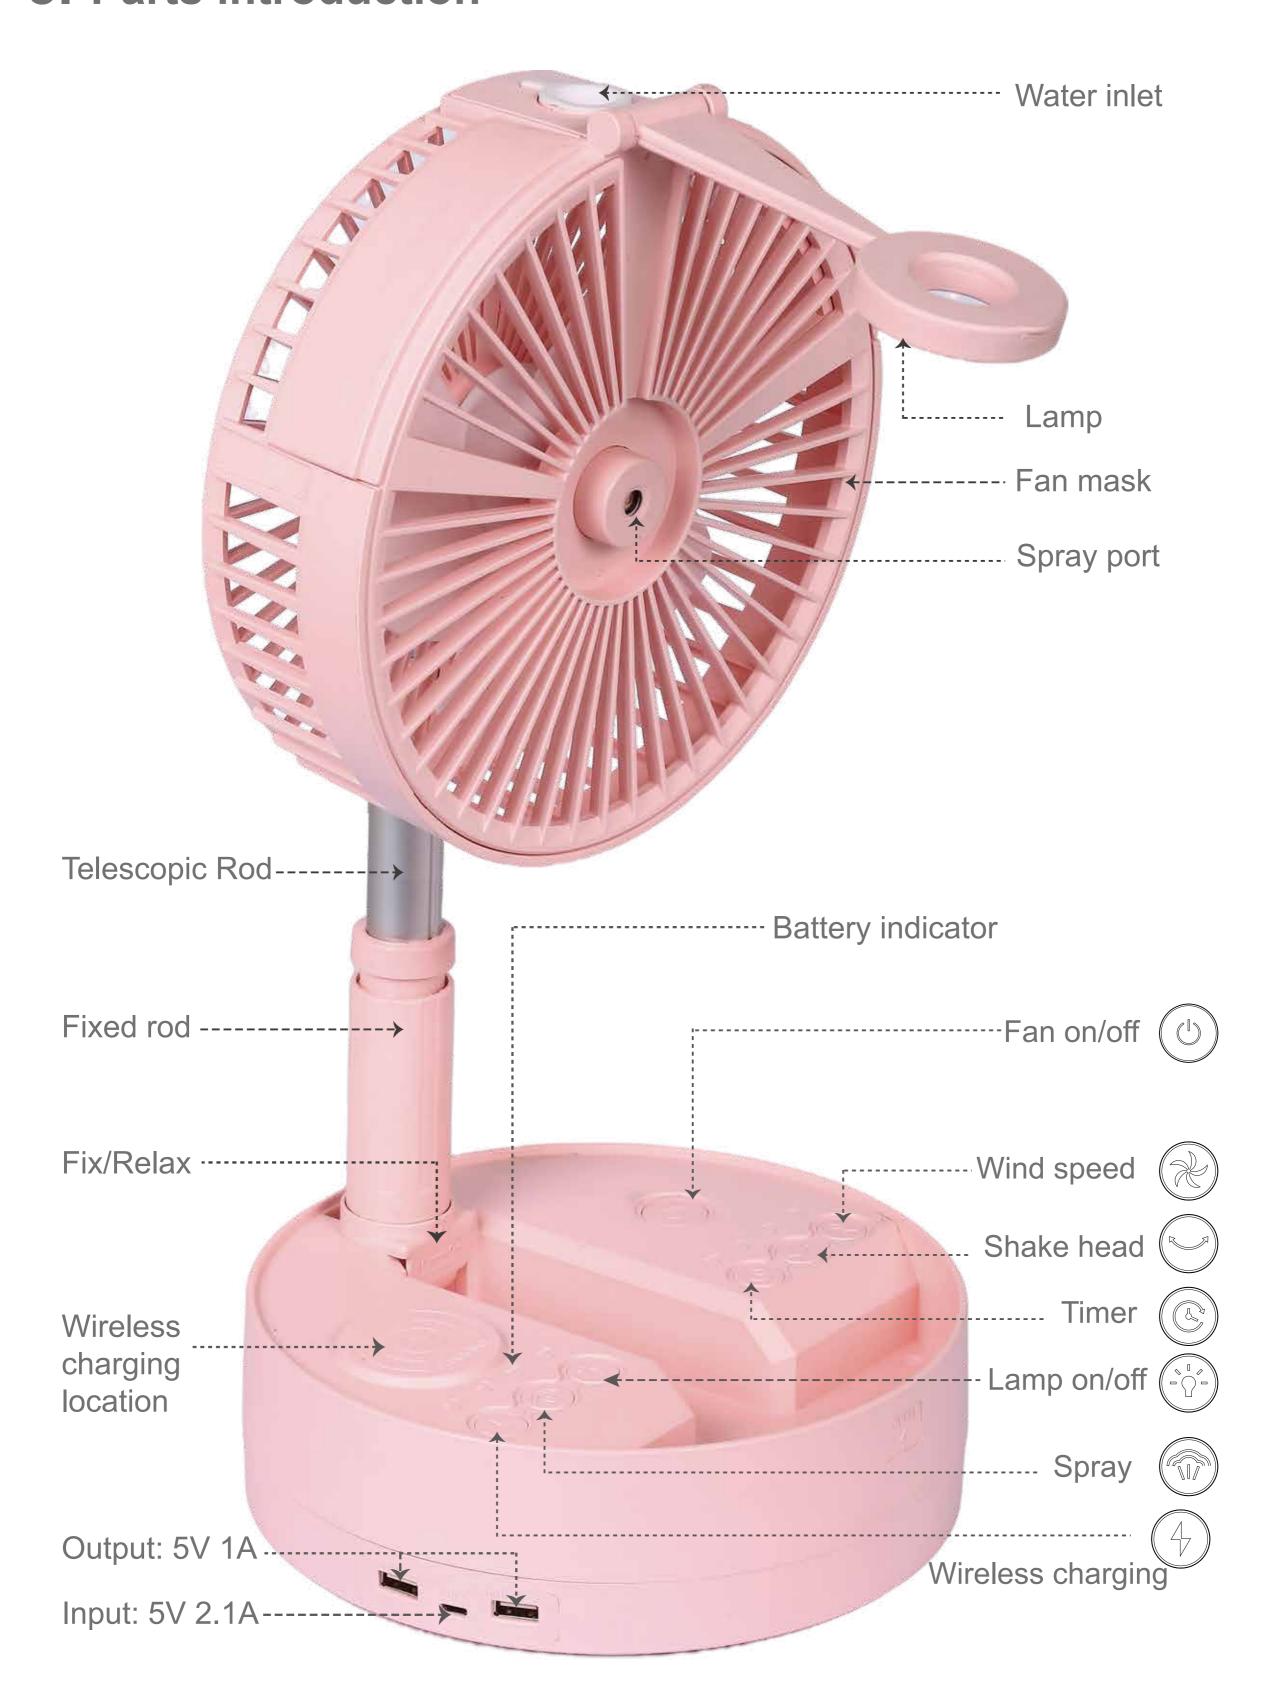

6. Mobile powerbank




The battery indicator will on when working, will go out after 33 seconds if the light is off and the fan is off.

7. Wireless charging







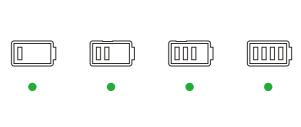

If the mobile phone support wireless charging.

The sensing part of the mobile phone is aligned with the wireless charging location for the highest charging efficiency.

- 1. When the battery indicator is green, put the mobile phone on the wireless charging location.
- 2. Press 4 button if no light is on.
- Green light indicates that phone is charging normally.

The green light keeps flashing means

- 1 The phone is far away from the wireless charging location
- 2 The mobile phone does not support wireless charging
- 3 The power is too low for wireless charging

8. Brightness and Angle of Light

Press "Lamp" (-\frac{1}{2}-) button to switch brightness

1 High 2 Medium 3 Normal 4 Off

Gentle lighting, opaque on the back





Adjusted and stopped

9. Spray

1. Pull up the cap of the water tank



2. Inject pure water without impurities, can add a little of perfume, then press the cap tightly.



3. Water tanks capacity: 70ml, press "Spray" to spray for 10minutes once, can spray about 16 times.



10. Shake head and Timer, Wind speed





Timer

The green light will show the time level.

0.5, 1, 2, 4 hours



Shake head

90°C rotation



Wind speed

1 Level: Gentle wind 2 Level: Medium wind 3 Level: Strong wind 4 Level: Natural wind When adjusting wind speed, green lights means wind speed level, turn off after 3s.



Press fan on/off then fan leaf blade rotation, press it again to stop

11. Specifications

Fan have 6pcs 18650 li-on batteries, total 15600mAh

Charging time: DC 5V 2.1A 8 hours

Product weight: 1.3KG (included 6pcs batteries)

Spray: To spray 10 mins once, full water can spray for 16 times

Working time of only the lamp is on:

High: 100 hours Medium: 150 hours Low: 225 hours

Working time of the fan is working only:

1 Level: 38 hours 1 Level and Shake head: 25hours

2 Level: 20hours 2 Level and Shake head: 16hours

3 Level: 12.5hours 3 Level and shake head: 10hours

4 Level: 20hours 4 Level and Shake head: 16hours

Wireless charging time: iPhone 12 charging time is around 4 hours

12. Clean fan



13. Folding storage

Turn off fan and lamp, adjust the lamp to the original position and the telescopic rod to lowest.



2. Rotate the fixed rod upward to loosen



3 Hide telescopic rod and fixed rod in the slot





